



Toyota Land Cruiser LC100

1. Open the glovebox to have access to engine ECU.

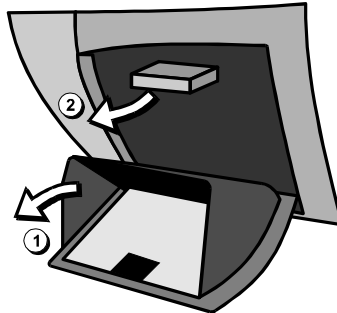

2. Connect yellow and red wires to engine ECU connector. Connect black wire to any point of ground.

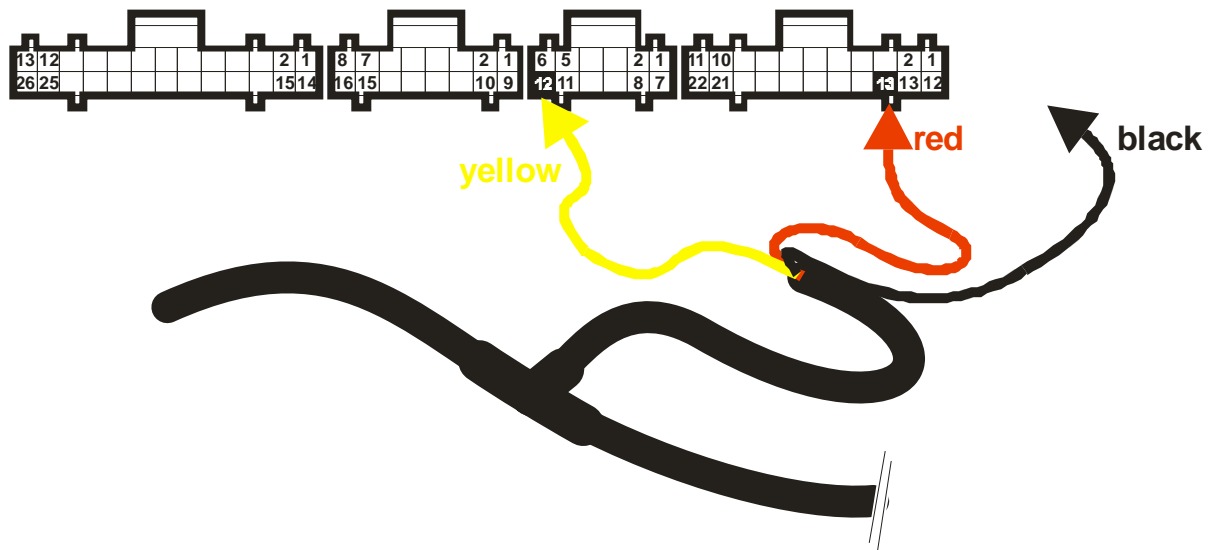

3. Connect black wire with fuse to fuel pump (typically red or gray wire).

