


Toyota LC 2.8D4D 177HP

1. Box type: VT401002.
2. Remove engine cover.



3. Find plug for rail pressure sensor. Disconnect it and connect box adapter between.

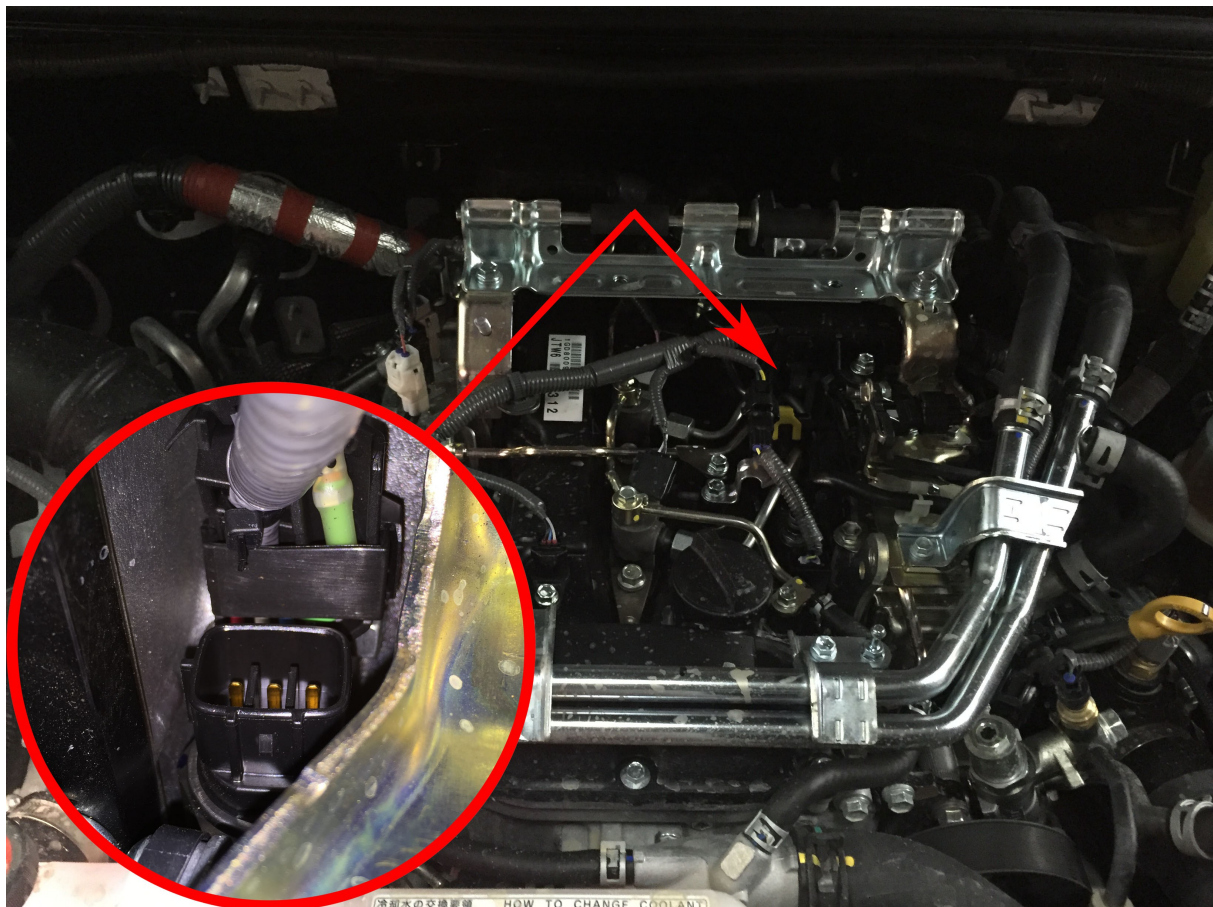

4. If box is equipped with yellow-red wire connect it to positive terminal in an engine compartment.