


Lexus 200t 2.0T

1. Box type: VT401200-022.
2. Remove engine cover.
3. Find plugs for intake pressure sensors. Disconnect them and connect box adapters between.

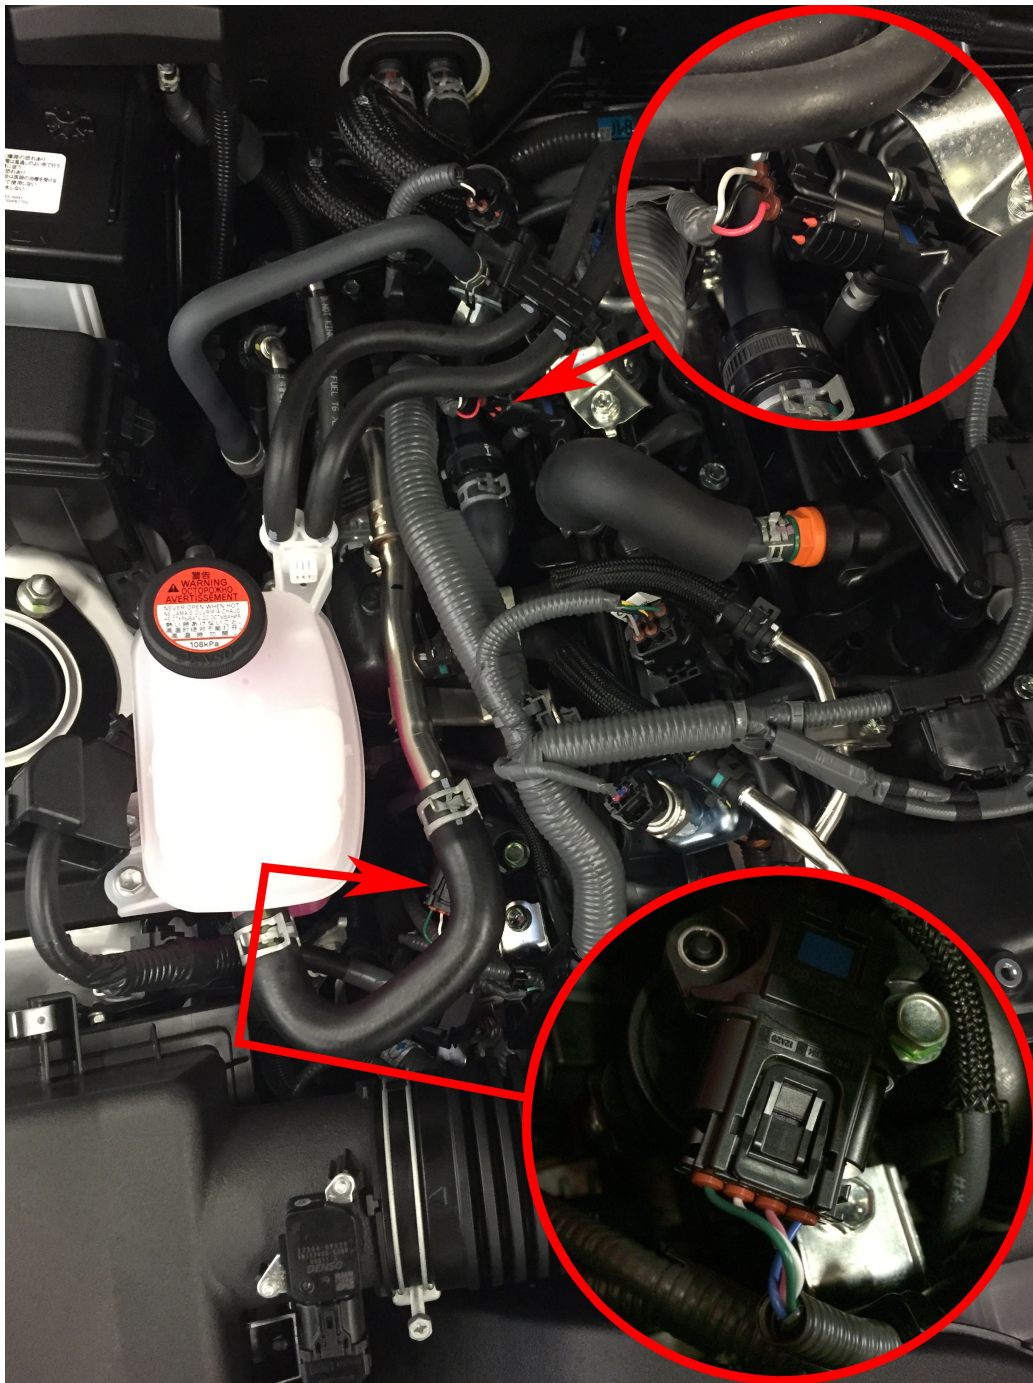

4. If box is equipped with yellow-red wire connect it to positive terminal in an engine compartment.