


Audi A4 1.9TDI 130HP 2002

1. Find plug for injector harness. Disconnect it and connect box adapter between.

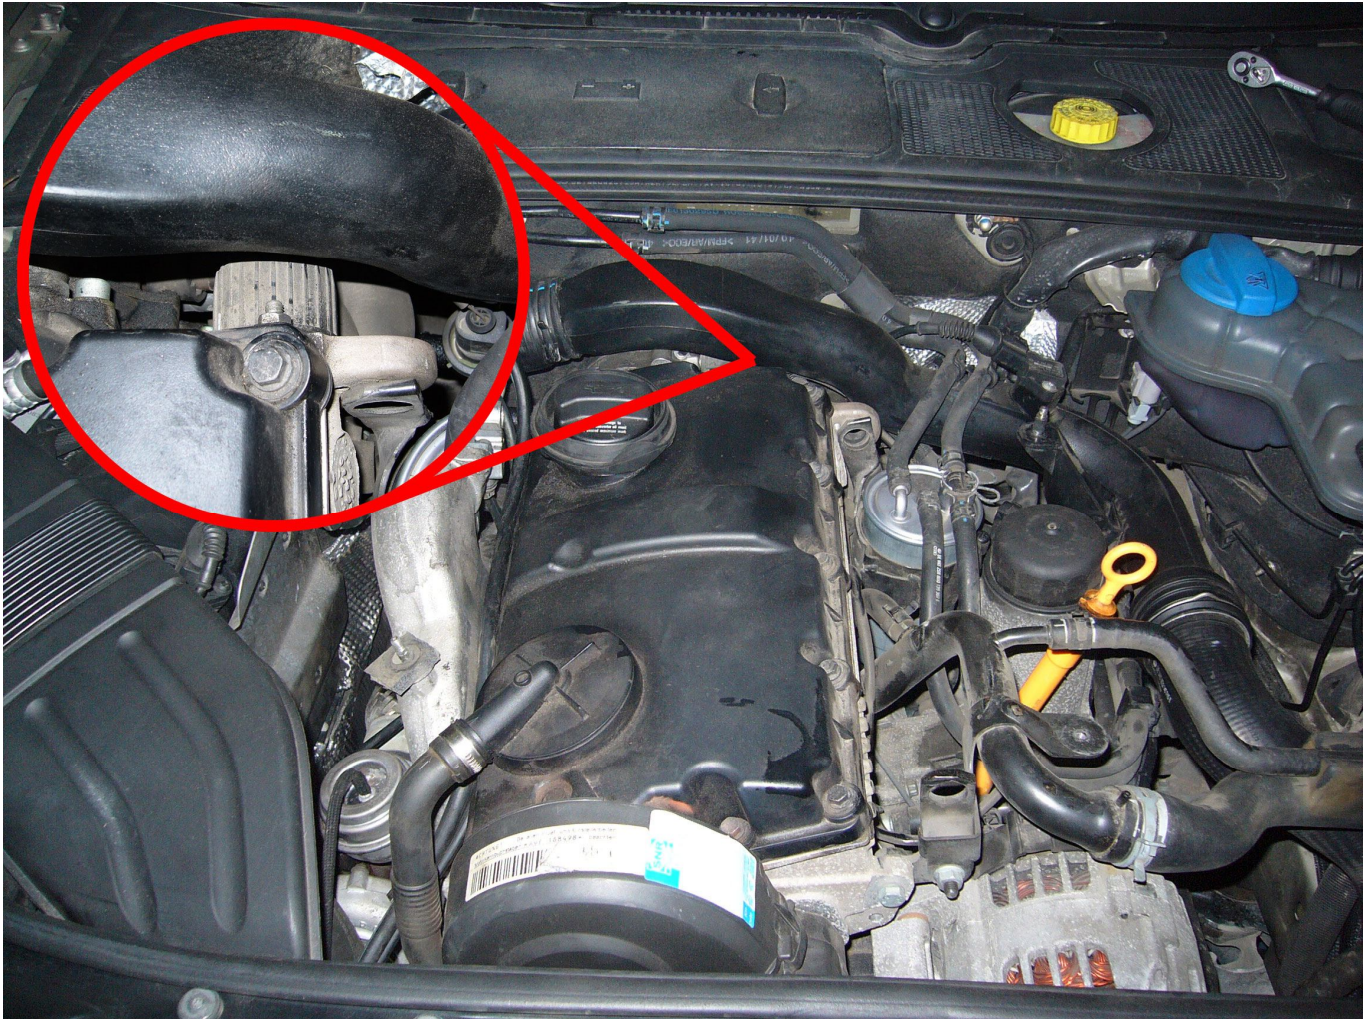

2. Connect black and red wires to battery.