


Ford S-Max 2.2TDCi 200PS

1. Box type:
2. Find plug for rail pressure sensor. Disconnect it and connect box adapter between.

3.

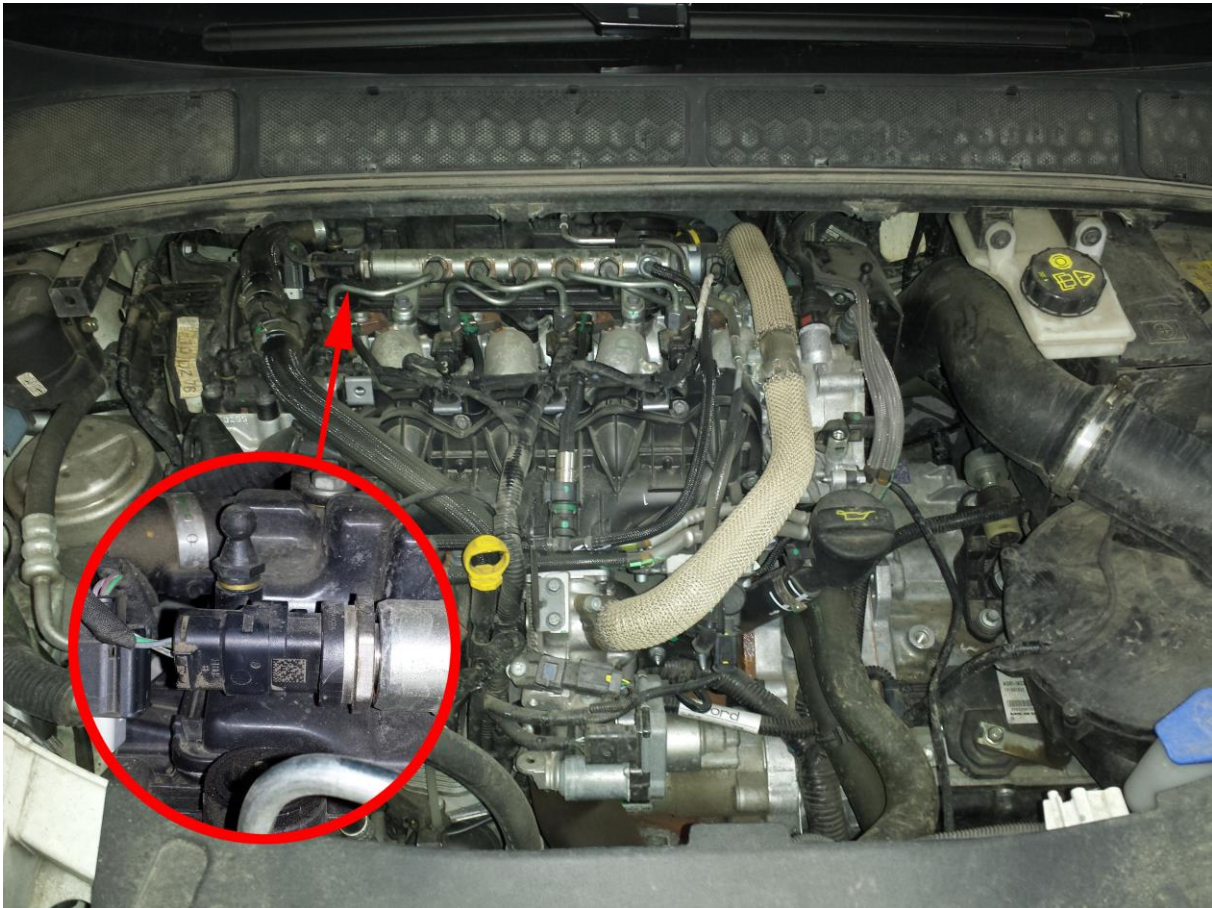

4. Connect the other end of the adapter to positive terminal of a battery.

