


Mercedes E250 2.0T 211HP



1. Switch ignition off, remove the key and wait about 5 minutes. Unplug ECU connectors and remove it from car.
2. Remove air filter housing.

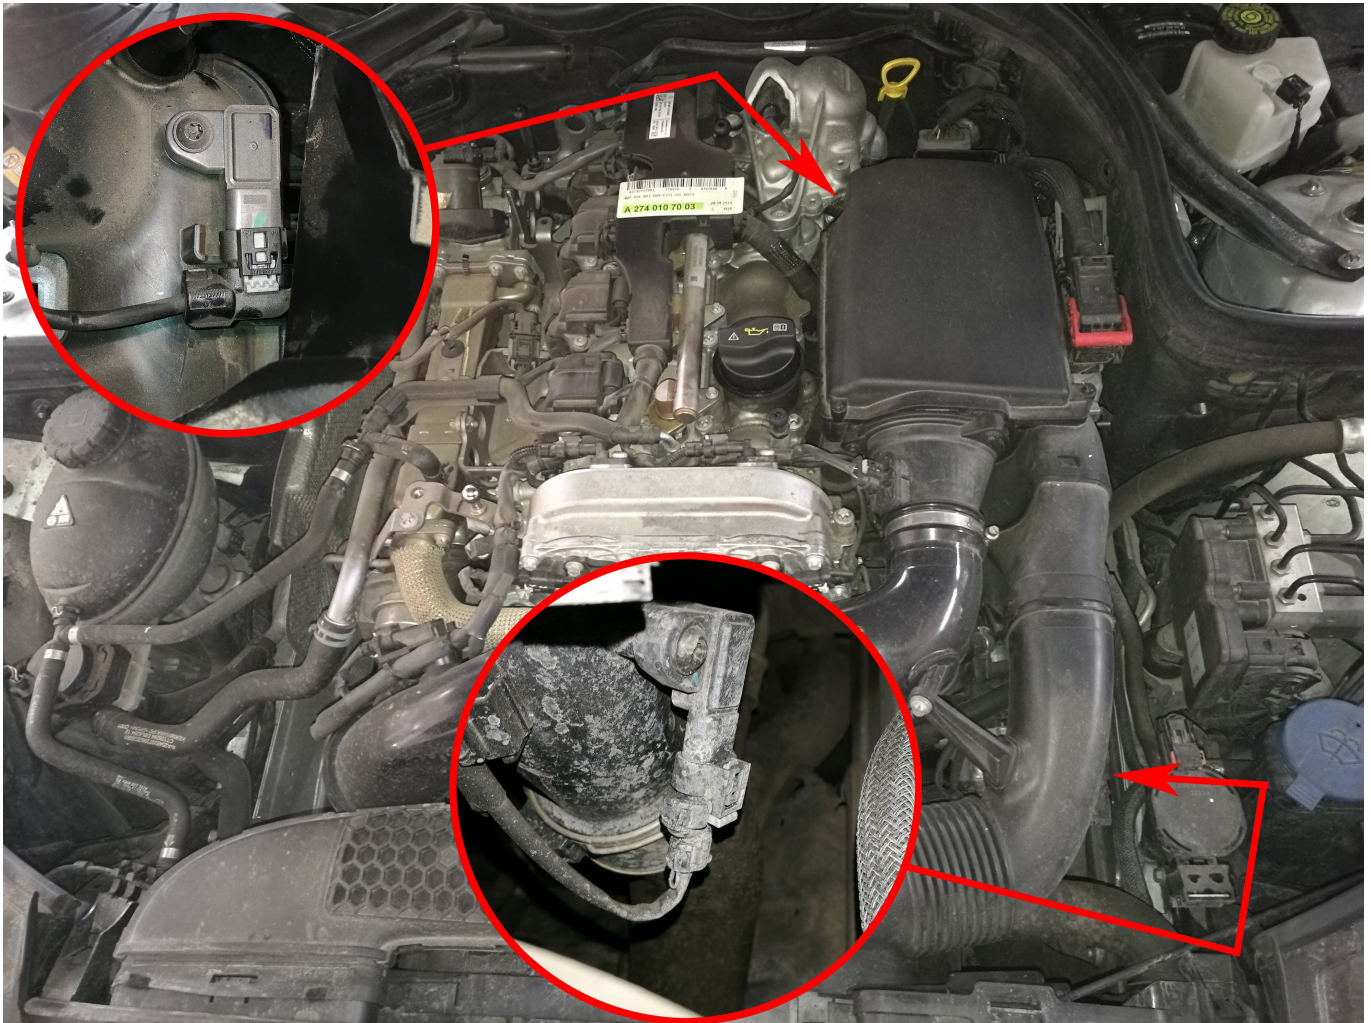

3. Find plugs for intake pressure sensors. Disconnect them and connect box adapters between.
4. Install air filter housing.
5. Install ECU and plug connectors.
6. If box is equipped with yellow-red wire connect it to positive terminal in an engine compartment.