


## VW Amarok 2.0BiTDI 180HP

- 1. Box type: VT401200-001.
- 2. Find plug for rail pressure sensor. Disconnect it and connect box adapter between.
- 3. Find plug for manifold pressure sensor. Disconnect it and connect box adapter between.

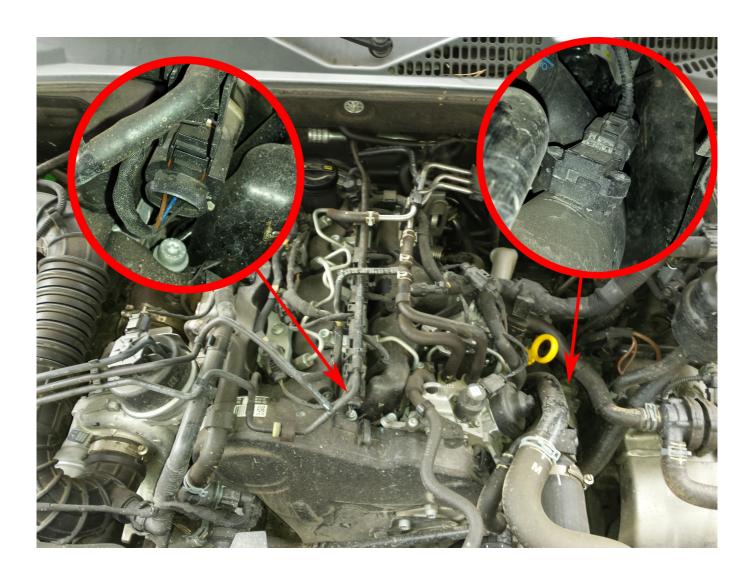

4. Connect yellow-red wire to positive terminal of a battery.