


## Audi A6 C7 3.0TDI 245PS

1. Box type:
2. Remove the engine shield.



3. Find plug for rail pressure sensor. Disconnect it and connect box adapter between.
4. Find plug for manifold pressure sensor. Disconnect it and connect box adapter between.

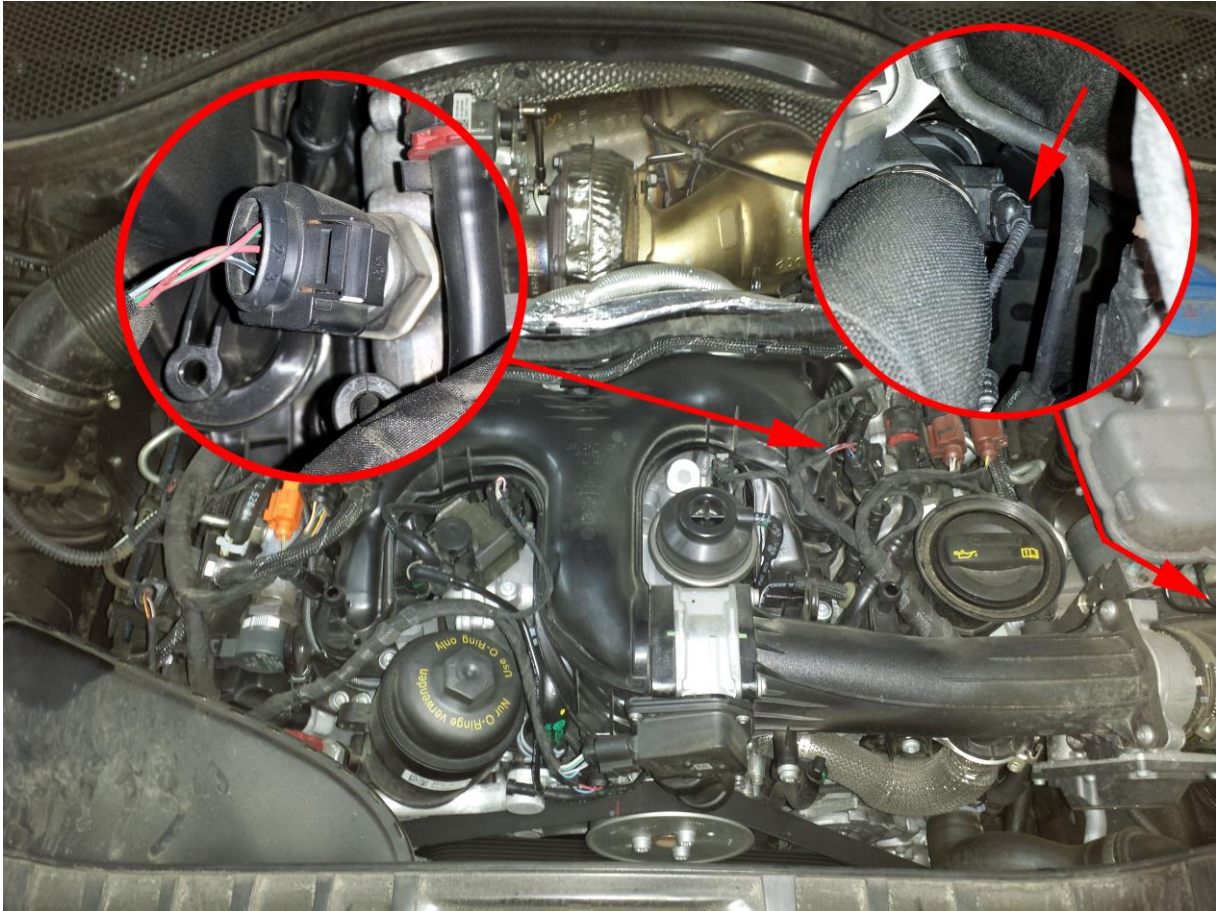

5. Connect yellow-red wire to positive terminal in an engine compartment.

