


## Ford Focus MK3 1.5 Ecoboost 150PS

1. Box type: VT401200-022.
2. Find plugs for intake manifold pressure sensors. Disconnect them and connect box adapters between.

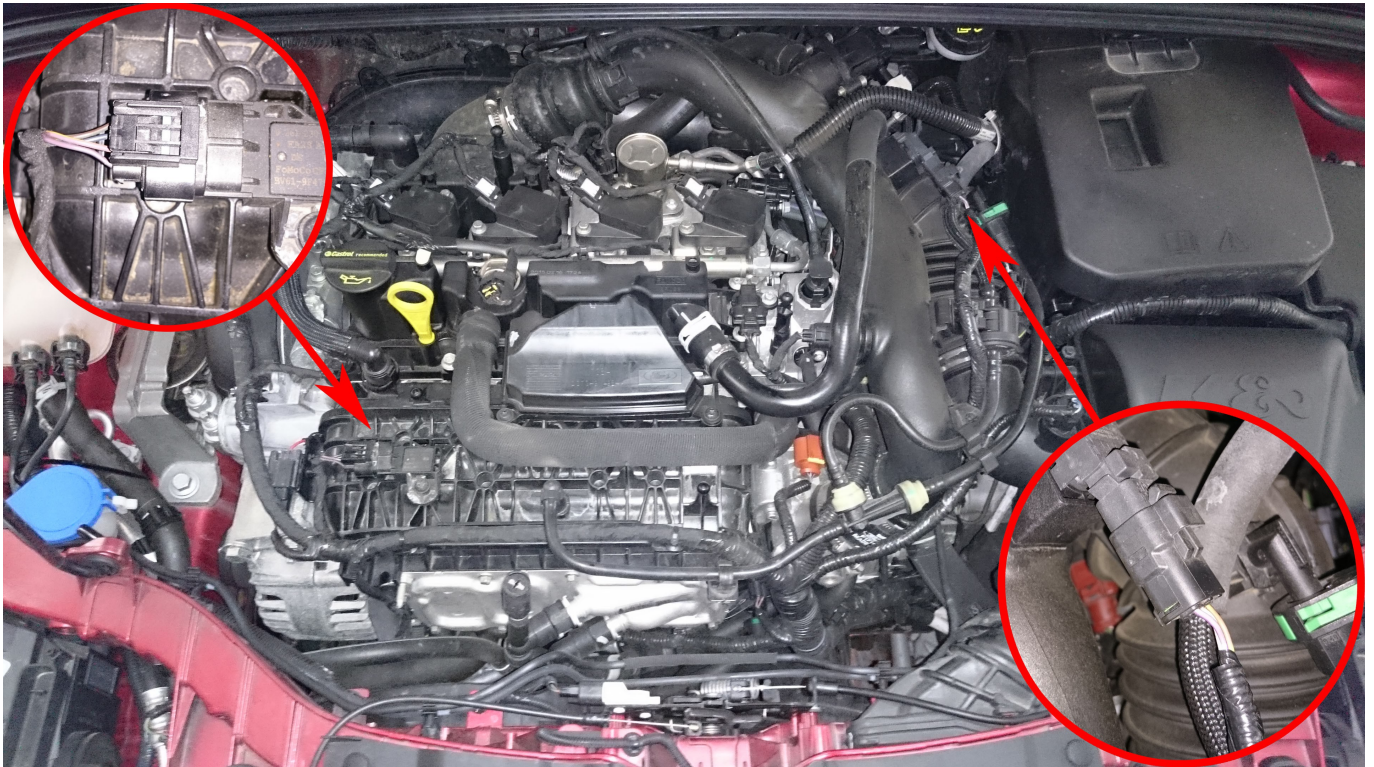

3. If box is equipped with yellow-red wire connect it to positive terminal in an engine compartment.