


## Mercedes W176 A180 1.6T 156HP

1. Box type: VT401200-013.



2. Switch ignition off, remove the key and wait about 5 minutes. Unplug ECU connectors and remove it from car.

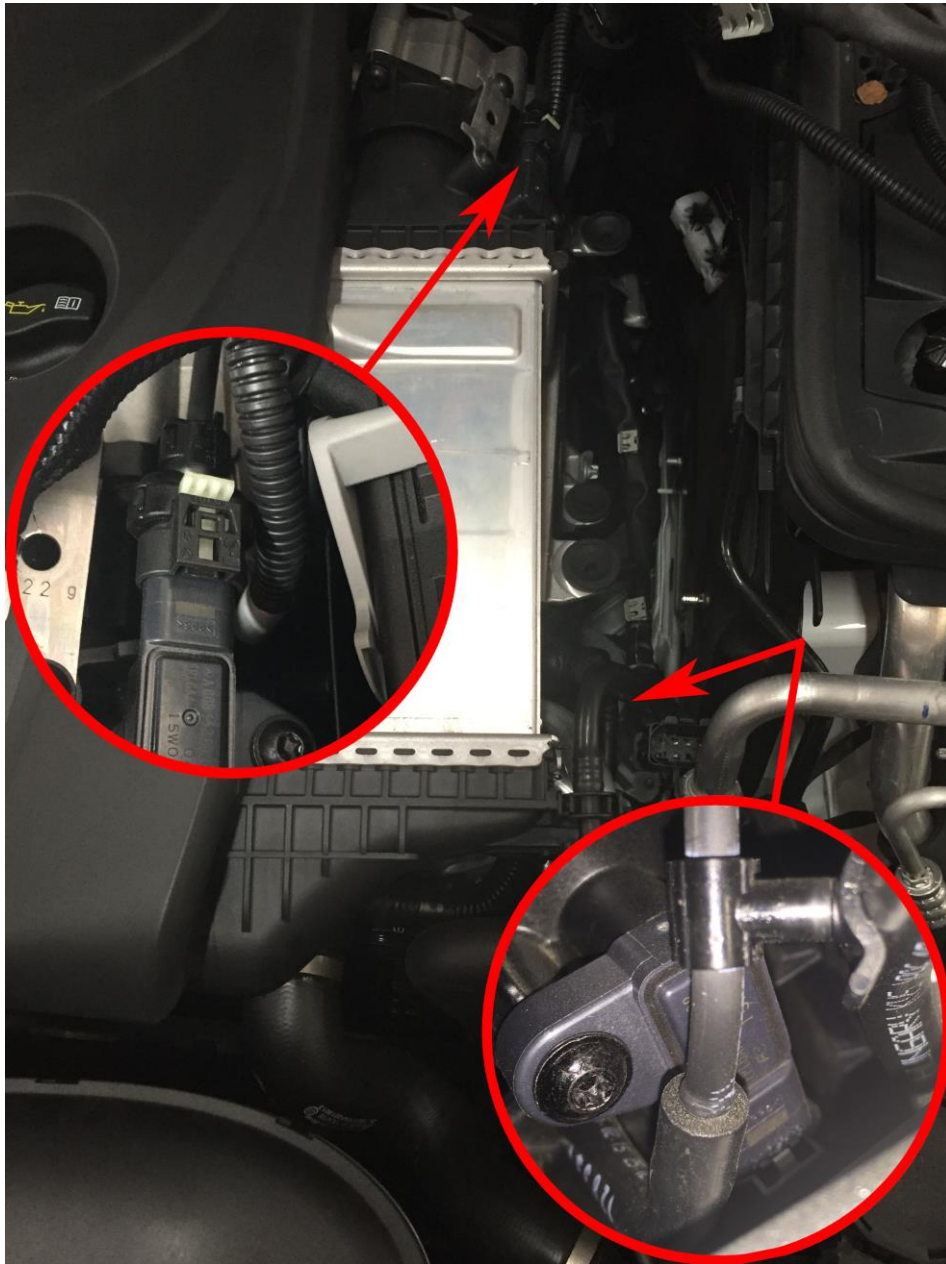

3. Find plugs for manifold pressure sensors. Disconnect them and connect box adapters between.
4. Install ECU and plug connectors.
5. If box is equipped with yellow-red wire connect it to positive terminal in an engine compartment.