


Skoda Fabia 1.2TSI 105PS

1. Box type: VT401200-008.
2. Find plugs for intake pressure sensors (1 and 2). Disconnect them and connect box adapters between.

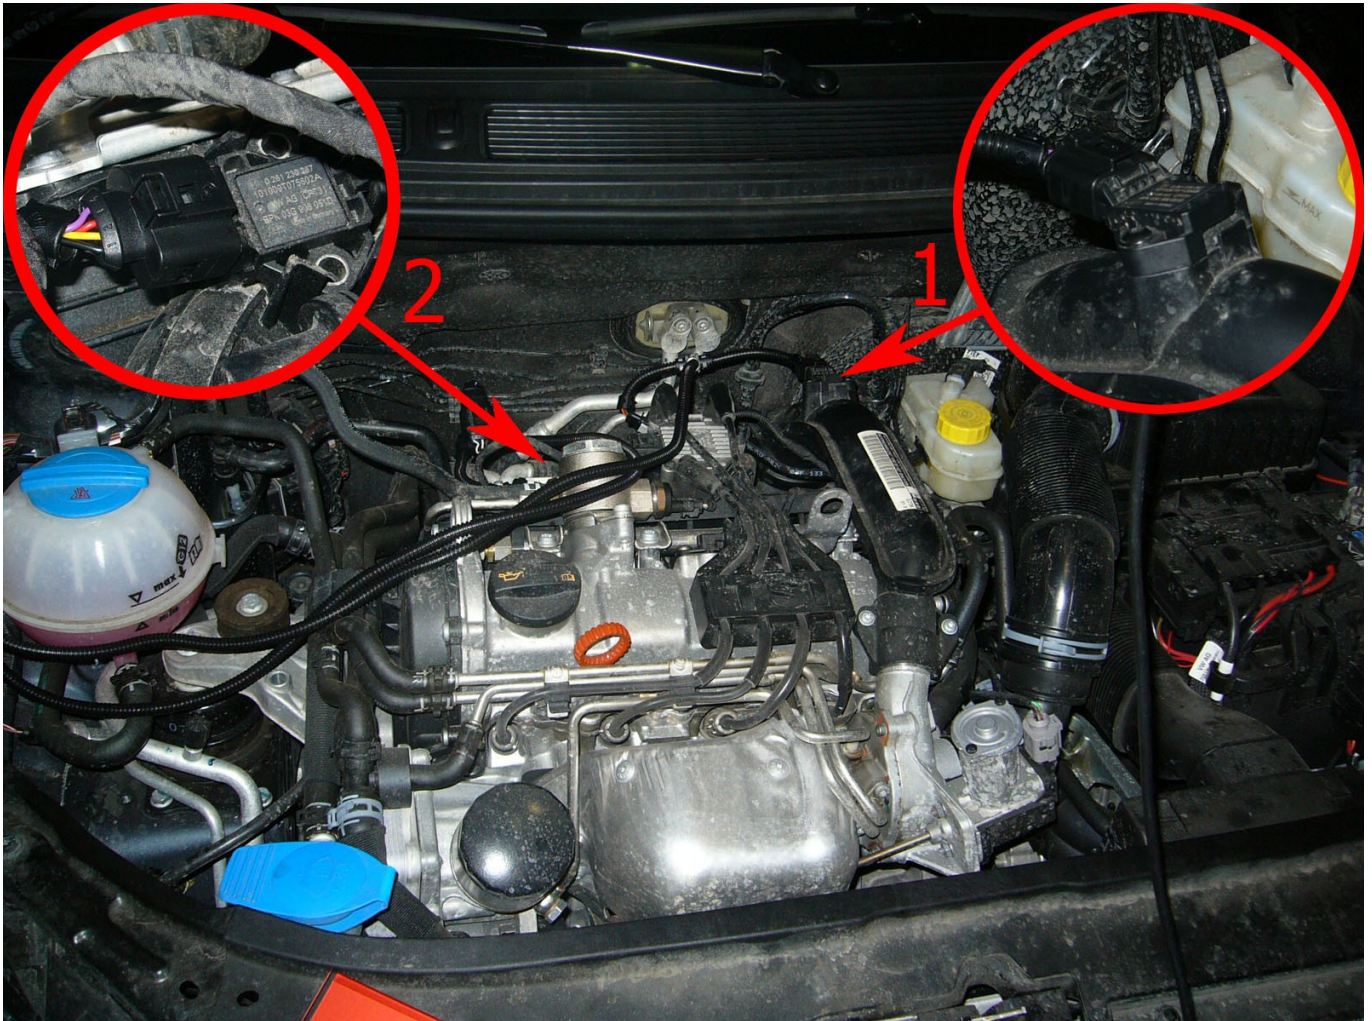

3. If box is equipped with yellow-red wire connect it to positive terminal in an engine compartment.