


Skoda Fabia 1.6 TDI 75HP

1. Box type: VT301200-001.
2. Find plugs for rail pressure sensor and manifold absolute pressure (from bottom). Disconnect them and connect box adapter between.

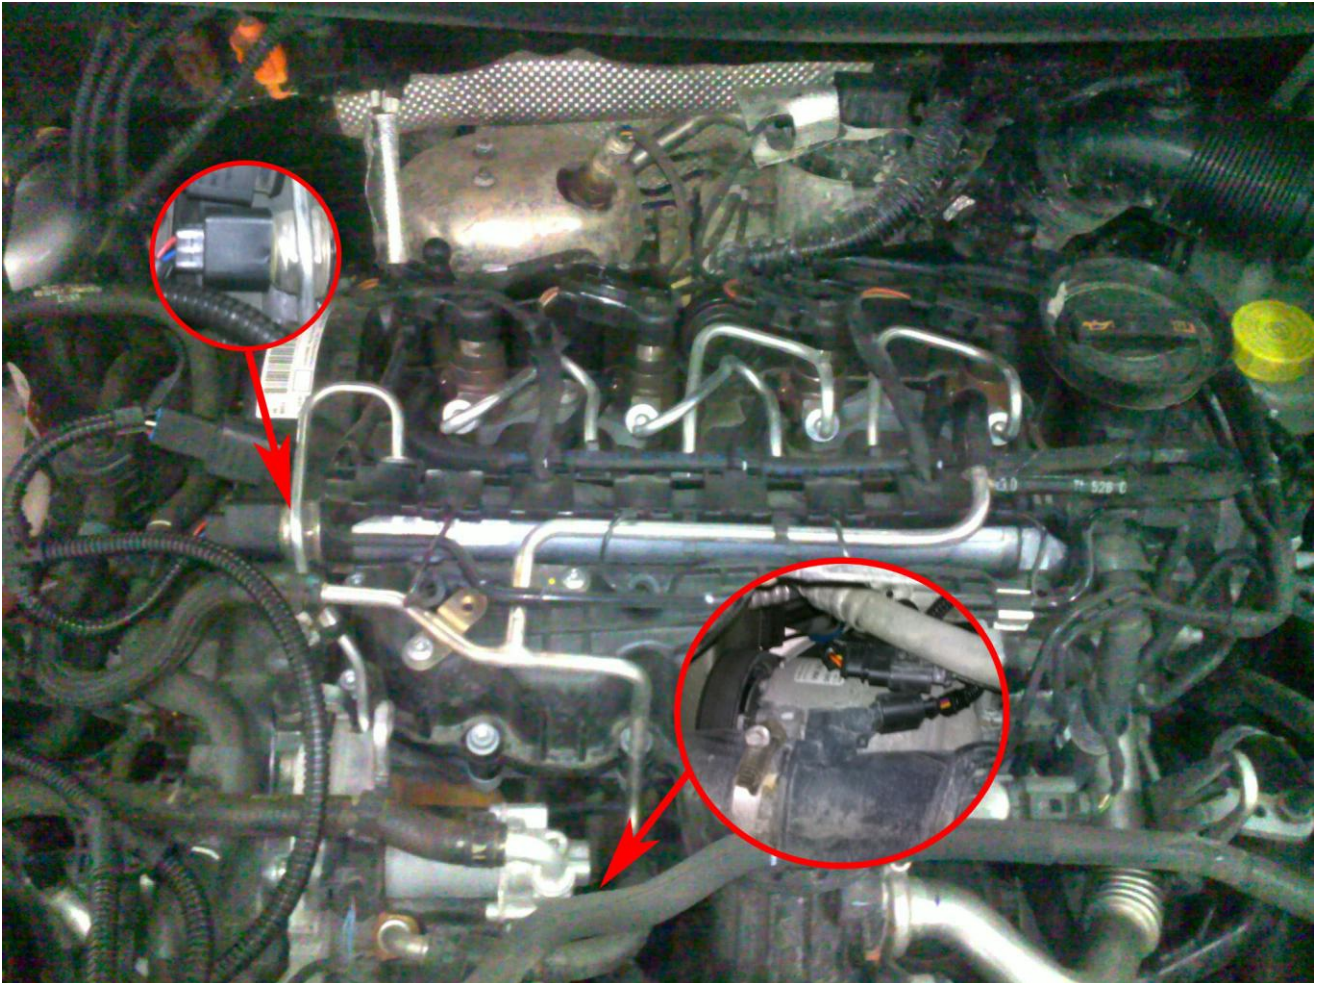

2013-up VAG 1.6 TDI Engine

1. Box type: VT101202.
2. Find plug for Fuel Rail Pressure Sensors. Disconnect it and connect box adapter between.

