


VW Crafter 2.0 TDI 163HP 2014

1. Box type: VT401200-001.
2. Find plug for rail pressure sensor. Disconnect it and connect box adapter between.
3. Find plug for manifold pressure sensor. Disconnect it and connect box adapter between.

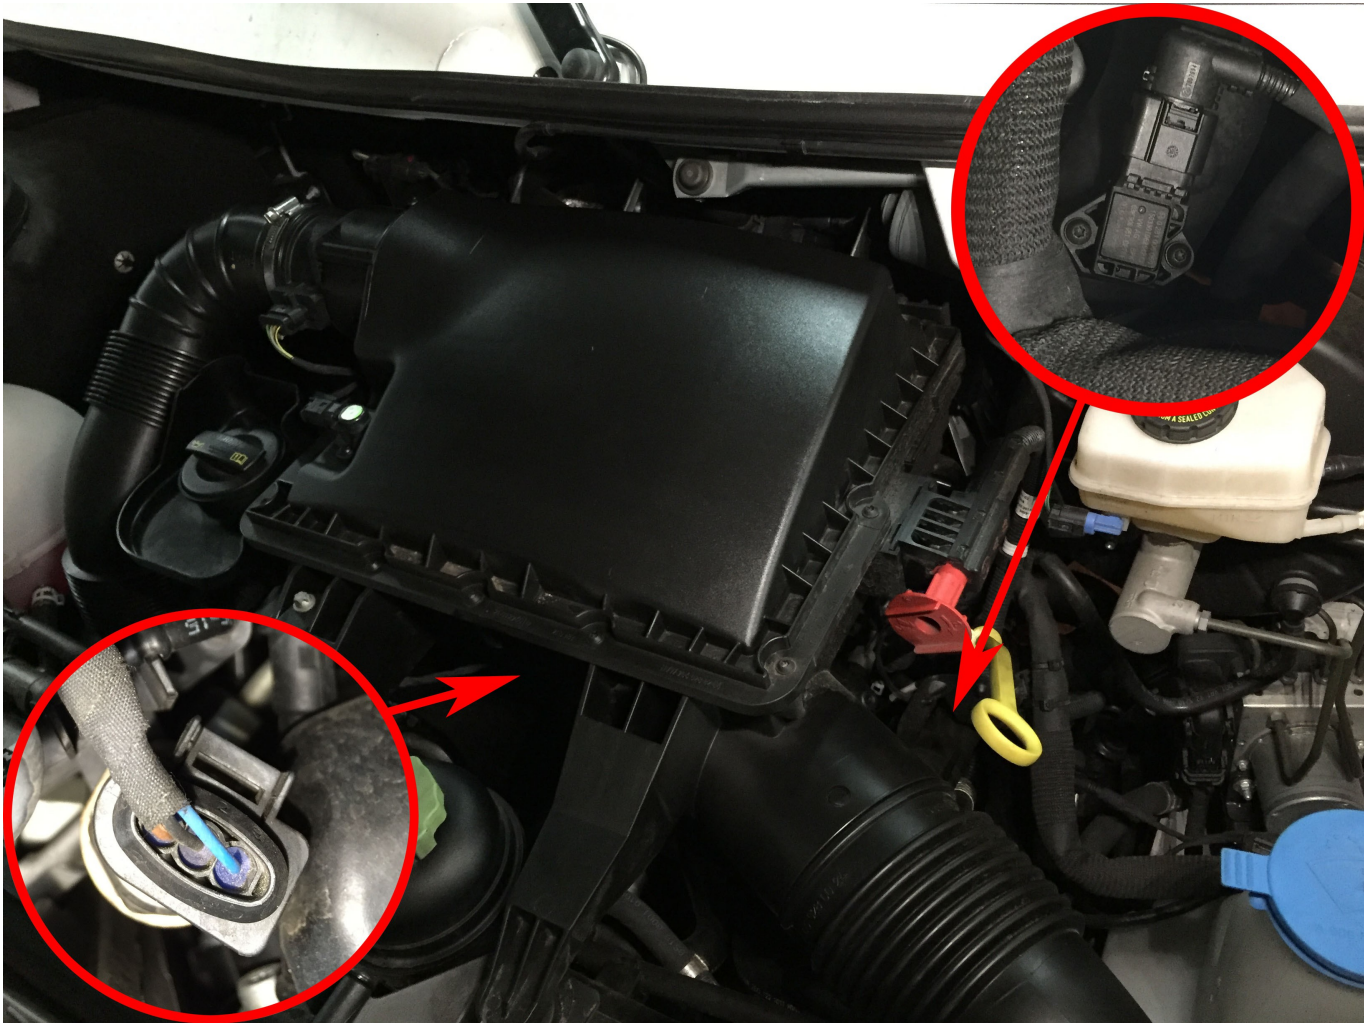

4. If box is equipped with yellow-red wire connect it to positive terminal in an engine compartment.